


Part No	Description	Qty.
SP4LC-01.1	RIGHT SIDE PLATE	1
SP4LC-02	BRASS BUSHING	2
SP4LC-03	LEFT DRIVE PLATE	1
SP4LC-04	REACTION BLOCK EXTENSION	1
SP4LC-05	HEX RATCHET	1
SP4LC-06	RIGHT DRIVE PLATE	1
SP4LC-07.1	LEFT SIDE PLATE	1
SP4LC-08	SCREW	4

Part No	Description	Qty.
SP4LC-09	SCREW	4
SP4LC-10.1	TOP SPACER	1
SP4LC-11	ROLL PIN	1
SP4LC-12	DRIVE PIN	1
SP4LC-13	ROLL PIN	2
SP4LC-14	DRIVE PIN SPRING	1
SP4LC-15	SECONDARY DRIVE PAWL	1
SP4LC-16	SPRING RING	1

Part No	Description	Qty.
SP4LC-17	TENSION SPRING	1
SP4LC-18	PRIMARY DRIVE PAWL	1
SP4LC-19	SPRING SPACER	1
SP4LC-20	TENSION SPRING	1
SP4LC-21.2	ROLL PIN	1
SP4LC-22	SPACER	1
SP4LC-23.1	REACTION PAWL	1
SP4LC-24	SCHROUD	1

4 LOW - 4 XLCT

Power Head Spare Parts List

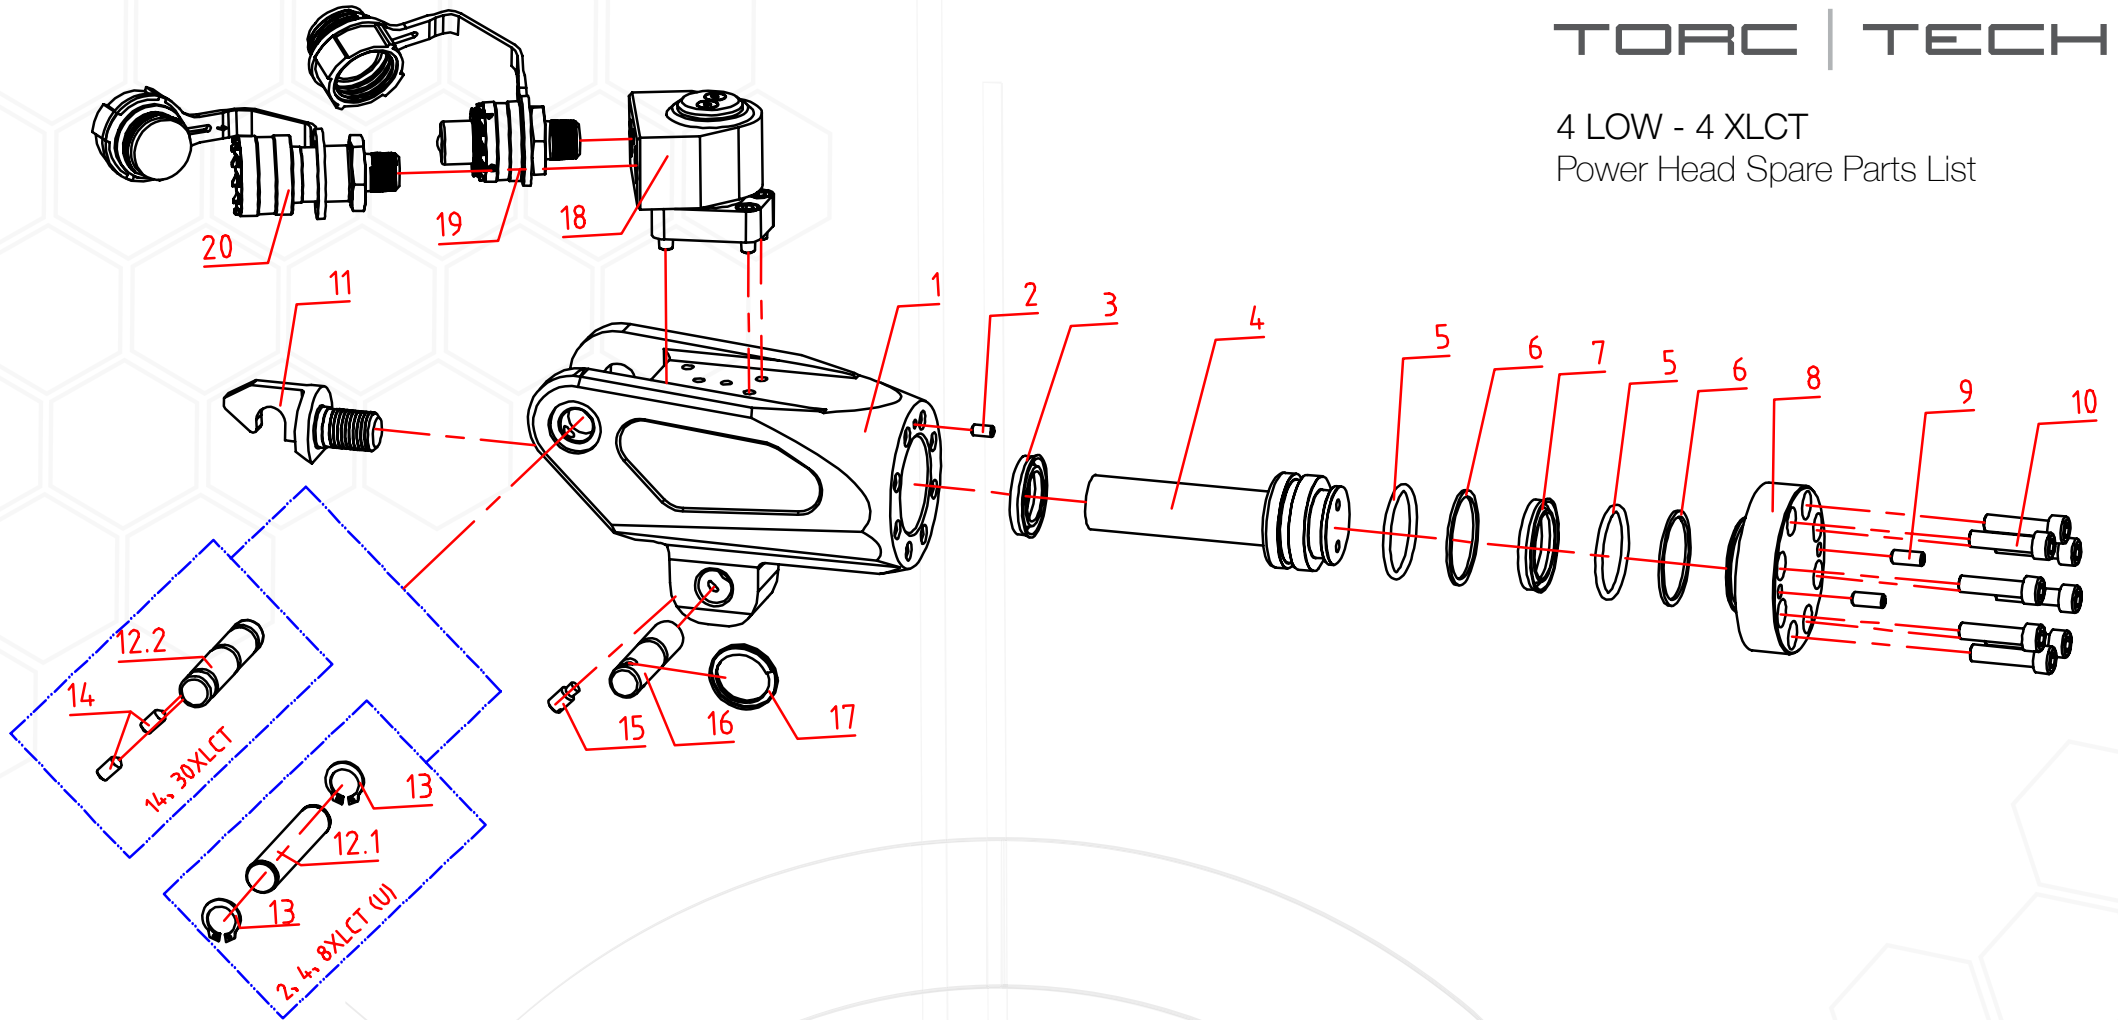

Part No	Description	Qty.
SP4LP-00	SEAL KIT	1
SP4LP-01	HOUSING	1
SP4LP-02	SCREW	1
SP4LP-04	PISTON ROD ASSAMBLY	1
SP4LP-08	END CAP	1

Part No	Description	Qty.
SP4LP-09	SCREW	2
SP4LP-10	SCREW	8
SP4LP-11	ROD END	1
SP4LP-12.1	FIXED UPPER PIN	1
SP4LP-13	RETAINING RING	1

Part No	Description	Qty.
SP4LP-14	SCREW	2
SP4LP-15	SCREW WITH SPRING	2
SP4LP-16	SHORT LINK PIN	2
SP4LP-17	RING	1
SP4LP-18	SWIVEL	1